

Mounting instructions

Handlebar risers 26885 for BMW R1200R (2011-2014)



Fits for:

Vehicles with a 28mm (28,6) handlebar and a hole distance of 37,5-45,5mm.

Shipping includes:

- 2x handlebar risers and offset
- 2x handlebar clamp upper part
- 2x washers 2mm
- 8x hexagon socket screw M8x25
- 1x homologation
- 1x mounting instructions




Dismantling:

Remove the upper half of the handlebar fixation (clamping blocks).

Mounting:

The handlebar risers with offset (1) will be used directly on the lower handlebar fixation (lower clamping block of the vehicle). For vehicles with height offset at the clamping block support, please use the enclosed washers on the original clamps in order to compensate the height offset. Please use the enclosed M8x25 screws (4) for fixation. The handlebar risers should be positioned in a way that the handlebar will come closer to the driver. After this, bring the handlebar (3) into position and evenly fix the upper handlebar clamps (2) with the enclosed M8x25 screws (4).

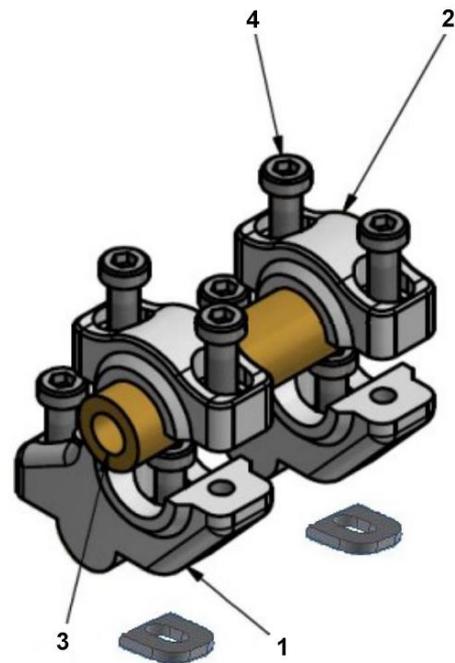

Screws and safety:

The enclosed screws must be fixed with the following torque:

M8 -> 23Nm

Please also secure the screws with liquid screw lock and regularly check their firm fit.

Remarks:

After installation, please make sure that the brake lines, Bowden cables and cables are neither stretched nor chafed, even with full steering angle! Please replace or extend if necessary.