



TAPAS TOBERA PARA - INJECTOR COVERS FOR - WASSERKÜHLERABDECKUNGEN FÜR BMW R1200GS LC '13-

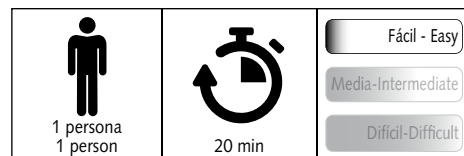

Ref.: 9175

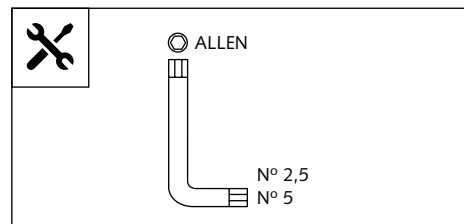


| ID | PIEZA / PART | DESCRIPCIÓN | DESCRIPTION | QTY | REF. |
|----|--------------|-------------------------------------|--------------------------------------|-----|-----------------|
| 1 | | Tapa derecha | Right cover | 1 | 9175IM3 |
| 2 | | Tapa izquierda | Left cover | 1 | 9175IM3 |
| 3 | | Soporte derecho modelo '17 | Model '17 right support | 1 | SOPOR-4P-5-9175 |
| 4 | | Soporte izquierdo modelo '17 | Model '17 left support | 1 | SOPOR-4P-5-9175 |
| 5 | | Soporte derecho modelo '13-'16 | Model '13-'16 right support | 1 | SOPOR-4P-5-9175 |
| 6 | | Soporte izquierdo modelo '13-'16 | Model '13-'16 left support | 1 | SOPOR-4P-5-9175 |
| 7 | | Tornillo Allen DIN912 M6x35 | M6x35 DIN912 Allen screw | 2 | TORNI-D912--447 |
| 8 | | Tornillo Allen ISO 7380 M4x10 NEGRO | M4x10 ISO7380 Inox Allen screw BLACK | 4 | TORNI-I7380_753 |
| 9 | | Arandela de nylon M4x0,5 | M4x0,5 nylon washer | 4 | ARNV00000000311 |



TAPAS TOBERA PARA - INJECTOR COVERS FOR - WASSERKÜHLERABDECKUNGEN FÜR
BMW R1200GS LC '13-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

MONTAJE LADO DERECHO
 RIGHT SIDE ASSEMBLY

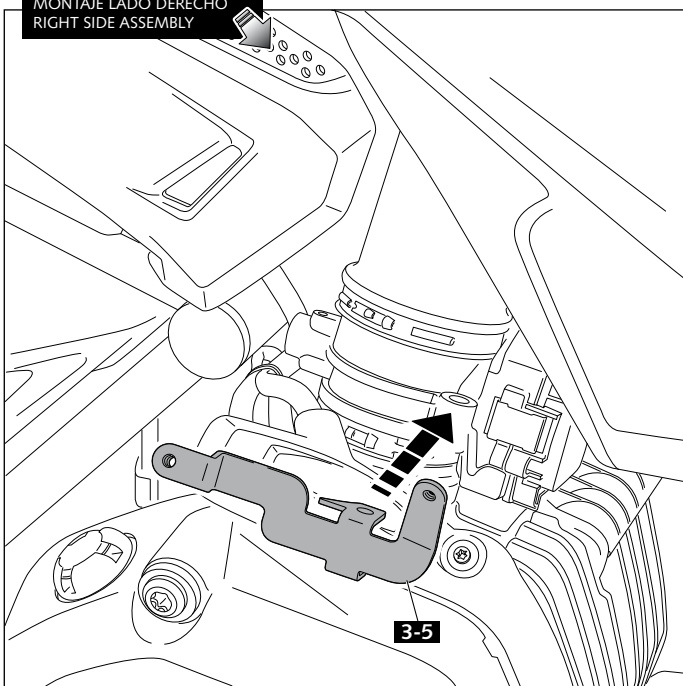


MODELO '17
 MODEL '17

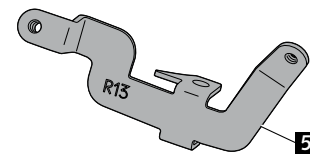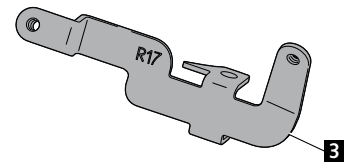

MODELO '13-'16
 MODEL '13-'16


1

MONTAJE LADO DERECHO
 RIGHT SIDE ASSEMBLY

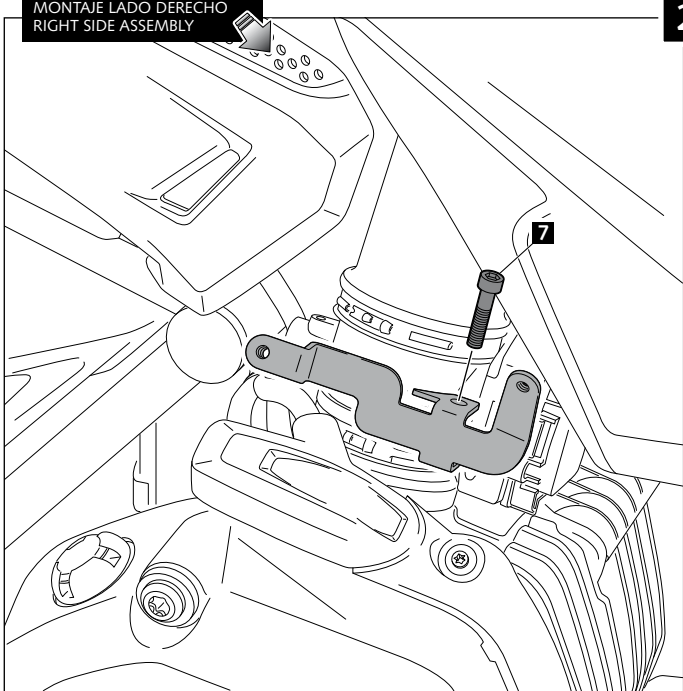

2

MONTAJE LADO DERECHO
 RIGHT SIDE ASSEMBLY

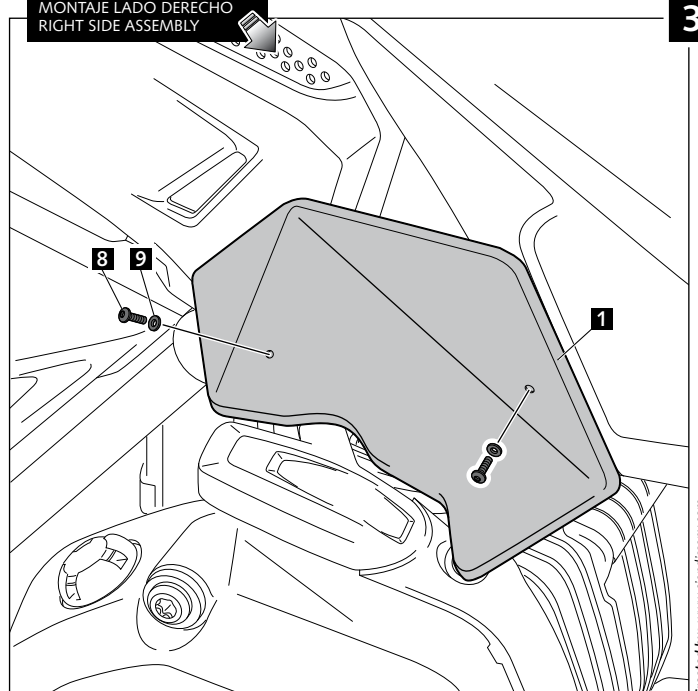

3

TAPAS TOBERA PARA - INJECTOR COVERS FOR - WASSERKÜHLERABDECKUNGEN FÜR
BMW R1200GS LC '13-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

